

1. default: use SPI boot mode, R5/R6 unmounted.
2. change to IIC boot mode, mount R5 & R6, unmount R7 & R8.
3. unmount R26 if DSP powered not by USBi.

