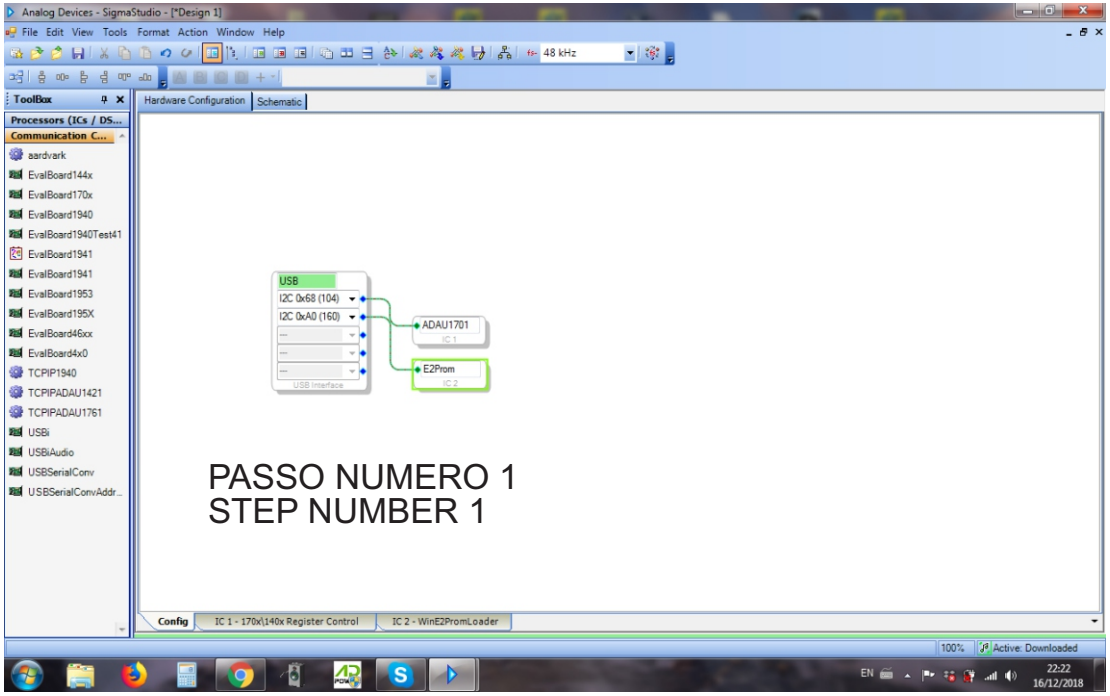
Analog Devices - SigmaStudio - [*Design 1]
PASSO NUMERO 1
STEP NUMBER 1

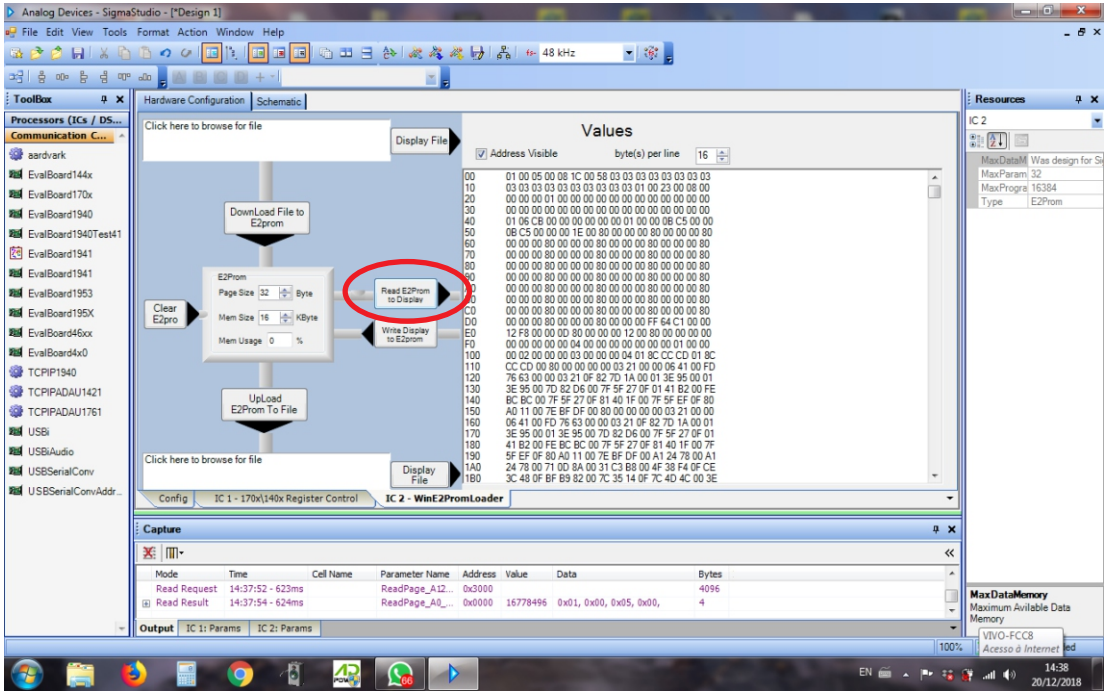
Analog Devices - SigmaStudio - [*Design 1]
Values

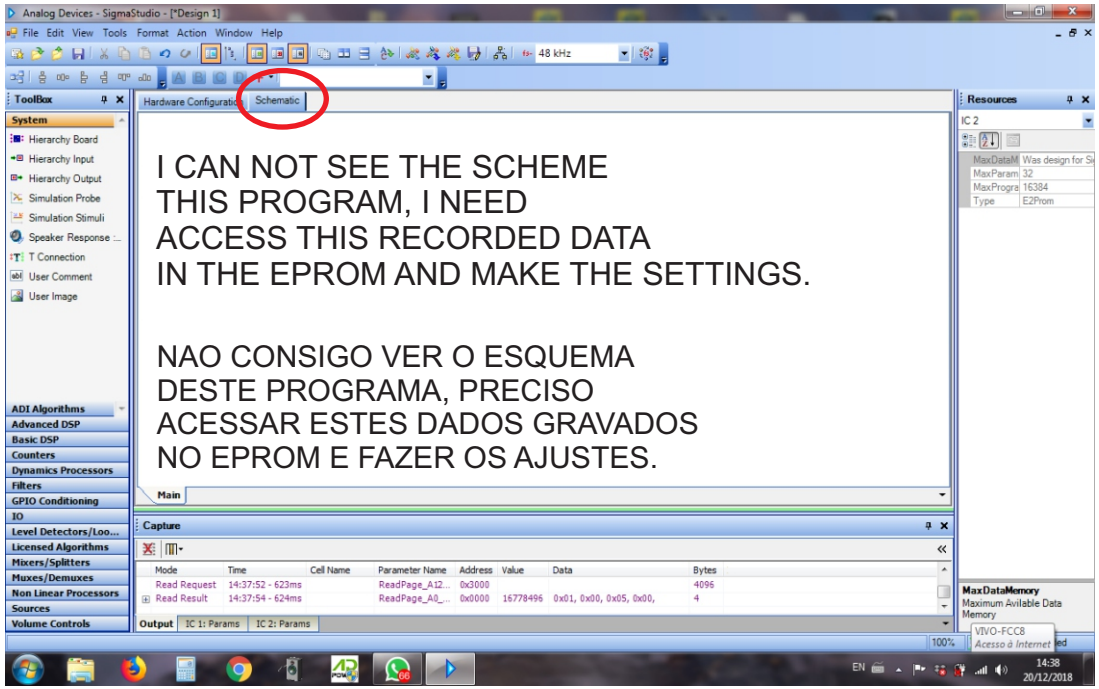
Analog Devices - SigmaStudio - [*Design 1]
I CAN NOT SEE THE SCHEME
THIS PROGRAM, I NEED
ACCESS THIS RECORDED DATA
IN THE EPROM AND MAKE THE SETTINGS.
NAO CONSIGO VER O ESQUEMA
DESTE PROGRAMA, PRECISO
ACESSAR ESTES DADOS GRAVADOS
NO EPROM E FAZER OS AJUSTES.

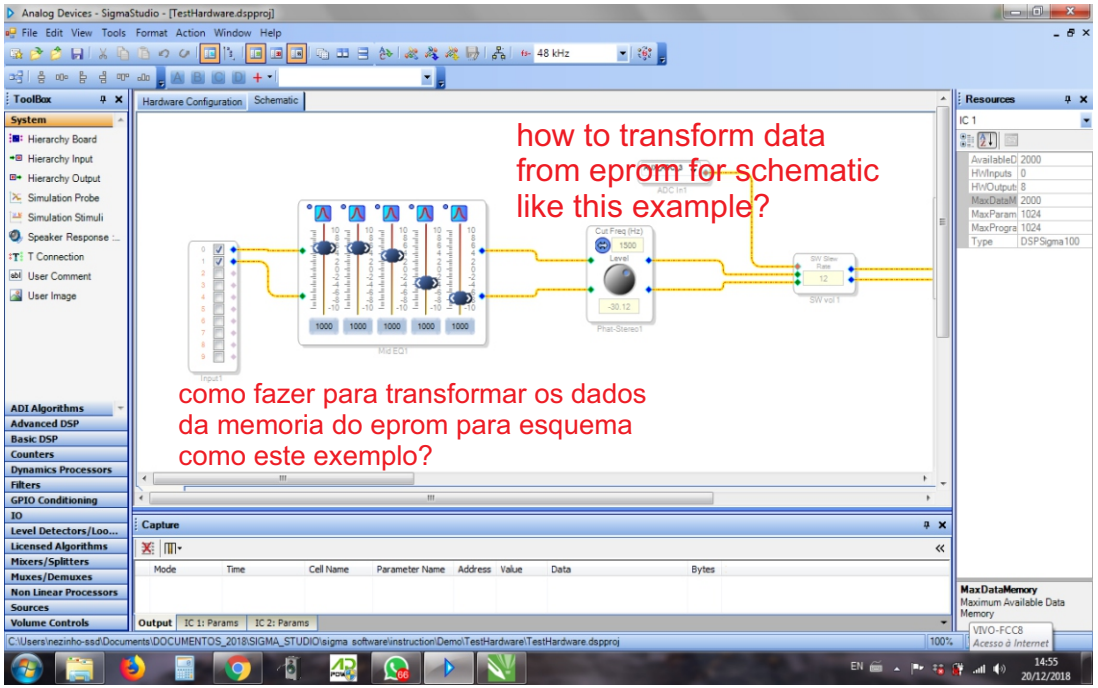
Analog Devices - SigmaStudio - [TestHardware.dspproj]
how to transform data
from eprom for schematic
like this example?
como fazer para transformar os dados
da memoria do eprom para esquema
como este exemplo?